
 

 



 

 
 
 
 
 




 





 

 



Original		Rechange		Original		Rechange	
	Power		Power		Tools		Setup / OPT /
	Mute		Mute / Dimmer		vTuner		Text / Goto
	Play		Play / Slow		Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Info		Info / Angle
	<<		<< / Tune-		Left		Left
	>>		>> / Tune+		Enter		OK
	I<<		I<< / Preset-		Right		Right
	>>I		>>I / Preset+		Exit		Exit / Cancel / Clear
	3D Sound		Sound / Title		Down		Down
	Dolby PL II		Audio / Lang I/II		Return		Back / Return
	S/W Level		Subtitle / EQ		Vol +		Vol+
	Eject		Eject / Surround		Smart Hub		Smart / List
	Full Screen		Zoom / Size		Tuning / CH +		CH+ / Page+
	Sleep		Sleep / Timer		Vol -		Vol-
	Function		TV/Radio /		DSP		Display / Media
	Disc Menu		D.Menu / Top		Tuning / CH -		CH- / Page-















 





 






 








Original	Rechange
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 SFE Mode	 Guide / EPG / -/--
 0	 0
 2D → 3D	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green / iPod Sync	 Green / APP / Repeat
 Yellow / Tuner Memory	 Yellow / YouTube / Repeat
 Blue / Mo/St	 Blue / Prime Video / Random
 Title Menu / PopUp Menu	 Shift + Menu / Home

Original	Rechange
 Search	 Shift + Red / Netflix /
 Repeat	 Shift + Green / APP /





Original		Rechange		Original		Rechange	
	Power		Power		Stop		Stop / Hold
	TV Source		AV / Input / RDS		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	1		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3		3		CH+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		CH-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Tools		Setup / OPT /
	8		8		Up		Up
	9		9		Info		Info / Angle
	0		0		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down



