











 






Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		Info		Info / Angle
	Power		Power		Left		Left
	PP		Back / Return		Up		Up
	I-II		Audio / Lang I/II		P+		CH+ / Page+
	1		1		Right		Right
	2		2		Down		Down
	3		3		P-		CH- / Page-
	4		4		Vol-		Vol-
	5		5		Vol+		Vol+
	6		6		Red/Sound		Red / Netflix / Search
	7		7		Red/Sound		Sound / Title
	8		8		Green/Picture		Green / APP / Repeat
	9		9		Green/Picture		Picture / Format
	0		0		Yellow/Feature		Yellow / YouTube / Repeat
	--		Guide / EPG / -/--		Blue/Install		Blue / Prime Video / Random
	P<P		Fav / Marker / PC		TV		TV/Radio /
	Menu		Menu / Home		AV		AV / Input / RDS





Original	Recharge	Original	Recharge
	[≡]		Text / Goto
	[/≡]	+	Shift + Text /
	[≡o]		Sleep / Timer
	[≡+]		Stop / Hold
	[≡x]		Setup / OPT /
	[≡◆]		Zoom / Size
	[≡?]		Smart / List
	[≡i]		Display / Media

