






 

 









 

 
 
 





 










Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Rechange
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Menu	 Menu
 ^ / [ ]	 Format
 V / Guide / [ @ ]	 Options
 Play/[?]	 Play
 >>/[ ]	 >>
 >	 3D
 Stop/[X]	 Stop




 



 

 





 







 

 





 






Original	Recharge	Original	Recharge
 Pause/[≡i]	 Pause		
 Zoom	 Eject		
 (↔)	 Dual		






 



 

 





 







 

 





 




Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Top Menu	 D. Menu
 Back	 Back
 V / Guide / [G]	 Options
 ^ / [ ]	 Format
 <<	 <<
 Play/[?]	 Play
 >>/[ ]	 >>
 Stop/[X]	 Stop
 Pause/[ ]	 Pause





Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Recharge
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Top Menu	 D. Menu
 Back	 Back
 ^/[+]	 Format
 ˇ/Timer	 Options
 <<	 <<
 Play/[?]	 Play
 >>/[♦]	 >>
 Rec	 Rec
 Stop/[X]	 Stop
 Pause/[≡i]	 Pause

