


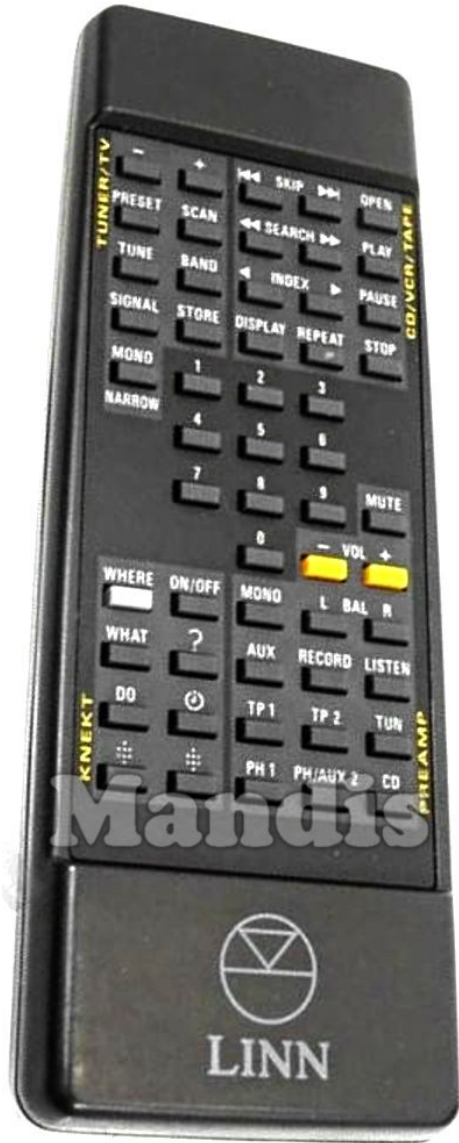

Original		Rechange		Original		Rechange	
1	1	TV	1	LISTEN	Listen	TITLE	Sound / Title
2	2	DVD	2	AUX	AUX	SHIFT + 7	Shift + 7
3	3	CD - STB	3	TP 1	TP 1	SHIFT + 4	Shift + 4
4	4	VIDEO	4	TP 2	TP 2	SHIFT + 5	Shift + 5
5	5	TAPE	5	TUN	TUN	SHIFT + 6	Shift + 6
6	6	TUNER	6	PH 1	PH 1	SHIFT + TV 1	Shift + 1
7	7	AUX - HDD	7	PH/AUX 2	PH/AUX 2	SHIFT + DVD 2	Shift + 2
8	8	USB	8	CD	CD	SHIFT + CD - STB 3	Shift + 3
9	9	BLUETOOTH	9				
0	0	HDMI - SAT	0				
MUTE	Mute	DIMMER MUTE	Mute / Dimmer				
- VOL	Vol-	VOL -	Vol-				
VOL +	Vol+	VOL +	Vol+				
MONO	Mono	LANG I/II AUDIO	Audio / Lang I/II				
L BAL	Bal L	Left Arrow	Left				
R BAL	Bal R	Right Arrow	Right				
RECORD	Record	REC MODE	Rec / Rec Mode				























































Original	Rechange	Original	Rechange
	<< / Tune-		5
	Left		6
	<< / Preset-		7
	>> / Tune+		8
	Right		9
	>>  / Preset+		0
	Green / APP / Repeat		Mute / Dimmer
	Blue / Prime Video / Random		Vol+
	Yellow / YouTube / Repeat		Vol-
	Red / Netflix / Search		
	Setup / OPT /		
	D.Menu / Top		
	Audio / Lang I/II		
	1		
	2		
	3		
	4		







	Original	Recharge		Original	Recharge
	I<< Skip	 I<< / Preset-		6	 6
	Skip >>I	 >>I / Preset+		7	 7
	Open	 Eject / Surround		8	 8
	<< Search	 << / Tune-		9	 9
	Search >>	 >> / Tune+		0	 0
	Play	 Play / Slow		Mute	 Mute / Dimmer
	< Index	 Left		Vol-	 Vol-
	Index >	 Right		Vol+	 Vol+
	Display	 Display / Media			
	Pause	 Pause / Step / Freeze			
	Repeat	 Green / APP / Repeat			
	Stop	 Stop / Hold			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			

