



Original		Recharge		Original		Recharge	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Up		Up		Exit		Exit
	Down		Down		P<P/Swap		Pre Ch
	Right		Right		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK/Select		Ok		P+		Ch +
	M		Menu		P-		Ch -
	1		1		PP		Eject
	2		2		I-II		Dual
	3		3		Tv/DTV		TV/R
	4		4		[≡]		Text
	5		5		[≡0]		Options
	6		6		AV/Source		AV
	7		7		[≡+]/[X]		Format
	8		8		[≡X]/[■]		3D
	9		9		[.≡]/[■]		Subt





Original		Rechange		Original		Rechange	
[≡♦]		APP MEDIA	Media				
[≡?]		RETURN BACK	Back				
[≡i]		DISPLAY INFO	Info				
Red/[+]/Wide/↑		A	Red				
Green/↓		B	Green				
Yellow		C	Yellow				
Blue/Guide		D	Blue				
[i]		E-MANUAL D.MENU	D. Menu				

