



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 V-Format	 Picture / Format
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC
 TV / Radio	 TV/Radio /
 List	 Smart / List
 SAT	 Shift + 0
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Vol +	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol -	 Vol-
 Recall	 Back / Return
 CH-	 CH- / Page-
 Menu	 Menu / Home

Original	Rechange
 Text	 Text / Goto
 Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Page Down	 Shift + CH- /
 Left	 Left
 OK	 OK
 Right	 Right
 Page Up	 Shift + CH+ /
 Down	 Down
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3





Original		Recharge		Original	Recharge
4 BH	4	VIDEO 4	4		
5 BH	5	TAPE 5	5		
6 BH	6	TUNER 6	6		
7 BH	7	AUX - HDD 7	7		
8 BH	8	USB 8	8		
9 BH	9	BLUETOOTH 9	9		
Speaker	Speaker	TITLE SOUND	Sound / Title		
0 BH	0	HDMI - BAT 0	0		
✓	✓	MEDIA DISPLAY	Display / Media		

