









 



 

 

 

 

 



 
 




	Original	Rechange	Original	Rechange
	Power	 Power		
	Mute	 Mute / Dimmer		
	Input Video	 4		
	Input USB	 8		
	Input Bluetooth	 9		
	Vol+	 Vol+		
	Subwoofer+	 CH+ / Page+		
	Vol-	 Vol-		
	Subwoofer-	 CH- / Page-		
	Sound Mode	 Sound / Title		
	I<< USB	 I<< / Preset-		
	Play USB	 Play / Slow		
	Pause USB	 Pause / Step / Freeze		
	>>I USB	 >>I / Preset+		

