



Original	Recharge
Power Receiver	Power
BD	Yellow / YouTube / Repeat
DVD	2
DVR / BDR	AV / Input / RDS
HDMI	0
TV/SAT	TV/Radio /
CD	3
HMG	Shift + AV / Input / RDS
ADPT	Eject / Surround
iPod USB	Shift + 8
Tuner	6
Video	4
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Recharge
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down





Original	Recharge	Original	Recharge
Return	Back / Return	3 Tuner	Shift + 3
Repeat	Green / APP / Repeat	Audio DVD	Shift + Audio / Lang I/II
Random	Blue / Prime Video / Random	4 Tuner	Shift + 4
<<	<< / Tune-	Signal Sel	Shift + Setup / OPT / Tools
Phase CTRL	Red / Netflix / Search	MCACC	Shift + Blue / Prime
Play	Play / Slow	5 Tuner	5
>>	>> / Tune+	6 Tuner	Shift + 6
Status	Exit / Cancel / Clear	Sleep	Sleep / Timer
I<<	I<< / Preset-	Disp	Display / Media
Pause	Pause / Step / Freeze	7 Tuner	7
MPX	Zoom / Size	CH Level	Shift + CH+ /
PQLS	Shift + Menu /	8 Tuner	8
Stop	Stop / Hold	A.ATT.	Shift + Yellow / YouTube /
>>I	>>I / Preset+	9 Tuner	9
1 Tuner	1	Dimmer	Shift + Mute / Dimmer
S.Retriever	Shift + Text /	CH +	CH+ / Page+
2 Tuner	Shift + 2	D.Access	Shift + D.Menu / Top Menu





Original	Rechange
[0]	[SHIFT] + [HDMI - SAT] 0 Shift + 0
[CLASS] [ENTER]	[SHIFT] + [MEDIA] [DISPLAY] Shift + Display / Media
[CLASS] [ENTER]	[SHIFT] + [OK] Shift + OK
[CH]	[CH] [PAGE] CH - / Page-
[AUTO/ALC/DIRECT]	[ANGLE] [INFO] Info / Angle
[STEREO]	[TITLE] [SOUND] Sound / Title
[STANDARD]	[SHIFT] + [LIST] [SMART] Shift + Smart / List
[ADV SURR]	[SHIFT] + [APP] [REPEAT] Shift + Green / APP /

Original	Rechange





	Original	Recharge		Original	Recharge
	Power Source		Power		>>
	DVD		Shift + 2		>> / Preset+
	Top Menu		D.Menu / Top		1
	Up		Up		2
	Left		Left		3
	Enter		Shift + OK		Audio
	Enter		OK		Audio / Lang I/II
	Right		Right		4
	Down		Down		5
	Return		Back / Return		6
	Menu		Menu / Home		7
	<<		<< / Tune-		8
	Play		Play / Slow		9
	>>		>> / Tune+		0
	I<<		I<< / Preset-		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		





Original		Rechange		Original		Rechange	
	Power Source		Power		3		3
	Tuner		Shift + 6		4		4
	Master Volume		Vol+		5		5
	Master Volume		Vol-		6		6
	Mute		Mute / Dimmer		Disp		Display / Media
	Band		Subtitle / EQ		7		7
	Tune+		>> / Tune+		8		8
	T.Edit		Text / Goto		9		9
	Preset-		I<< / Preset-		D.Access		D.Menu / Top
	Enter		OK		0		0
	Preset+		>>I / Preset+		Class		Shift + Display / Media
	Search		Red / Netflix / Search				
	Tune-		<< / Tune-				
	Menu		Menu / Home				
	MPX		Zoom / Size				
	1		1				
	2		2				

