

 

 



 

 

 

 

 

 

 



 





 
 






 

 

Original	Rechange
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold	 +  Shift + Stop /
 TVG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Aspect	 +  Shift + Picture / Format
 Media	 Smart / List
 Subpage	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Rechange
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 Sleep	 Sleep / Timer
 >>I/Index	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-





Original	Rechange
 Mute	 Mute / Dimmer
 Display	 Display / Media
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Source	 AV / Input / RDS

Original	Rechange
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

