



Original	Recharge
Open / Close	Eject / Surround
Mute	Mute / Dimmer
NP	D.Menu / Top
Recall	Back / Return
PS	Text / Goto
Spectrum	Smart / List
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--

Original	Recharge
Clear	Exit / Cancel / Clear
Stop	Stop / Hold
Zoom	Zoom / Size
3D	Picture / Format
Search	Red / Netflix / Search
Play	Play / Slow
Pause	Pause / Step / Freeze
Setup	Setup / OPT /
L/R Audio	Audio / Lang I/II
Left	Left
Up	Up
Right	Right
Enter	OK
Down	Down
PBC Menu	Menu / Home
Vol-	Vol-
Vol+	Vol+





Original	Recharge
OSD	Display / Media
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Title	Sound / Title
Slow	Shift + Play /
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Return	Shift + Back / Return
Subtitle	Subtitle / EQ
Angle	Info / Angle
Prog	TV/Radio /

Original	Recharge

