


 






| Original  |         | Rechange  |                  | Original  |          | Rechange  |                       |
|---|---------|---|------------------|---|----------|---|-----------------------|
|    | Power   |    | Power            |    | Menu     |    | Menu / Home           |
|    | Mute    |    | Mute / Dimmer    |    | Source   |    | AV / Input / RDS      |
|    | 1       |    | 1                |    | Up       |    | Up                    |
|    | 2       |    | 2                |    | Left     |    | Left                  |
|    | 3       |    | 3                |    | Enter    |    | OK                    |
|    | 4       |    | 4                |    | Right    |    | Right                 |
|    | 5       |    | 5                |    | Down     |    | Down                  |
|    | 6       |    | 6                |    | Exit     |    | Exit / Cancel / Clear |
|    | 7       |    | 7                |    | Display  |    | Display / Media       |
|    | 8       |    | 8                |    | Vol+     |    | Vol+                  |
|   | 9       |   | 9                |   | Vol-     |   | Vol-                  |
|  | 0       |  | 0                |  | MTS      |  | Info / Angle          |
|  | DTV/ATV |  | D.Menu / Top     |  | Rec List |  | Smart / List          |
|  | Recall  |  | Back / Return    |  | CH+      |  | CH+ / Page+           |
|  | P.Mode  |  | Picture / Format |  | CH-      |  | CH- / Page-           |
|  | S.Mode  |  | Sound / Title    |  | FAV/List |  | Fav / Marker / PC     |
|  | Sleep   |  | Sleep / Timer    |  | Rec      |  | Rec / Rec Mode        |





| Original   | Rechange  |
|--|---|
|  Freeze                 |  Pause / Step / Freeze         |
|  Guide                  |  Guide / EPG / -/--            |
|  <<                     |  << / Tune-                    |
|  >> / Aspect            |  >> / Tune+                    |
|  >> / Aspect            |  Shift + Picture / Format      |
|   << / Cancel           |   << / Preset-                 |
|   << / Cancel           |  Shift + Exit / Cancel / Clear |
|  >>  / Sub.PG           |  >>  / Preset+                 |
|  Stop / Index           |  Stop / Hold                   |
|  Play/Pause / Timeshift |  Play / Slow                   |
|  Tv/Radio              |  TV/Radio /                   |
|  Subtitle             |  Subtitle / EQ               |
|  Reveal               |  Eject / Surround            |
|  Size                 |  Zoom / Size                 |
|  Hold                 |  Shift + Stop /              |
|  Text                 |  Text / Goto                 |
|  Red                  |  Red / Netflix / Search      |


| Original   | Rechange  |
|--|---|
|  Green  |  Green / APP / Repeat        |
|  Yellow |  Yellow / YouTube / Repeat   |
|  Cyan   |  Blue / Prime Video / Random |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |





| Original  |         | Rechange  |                  | Original  |          | Rechange  |                       |
|---|---------|---|------------------|---|----------|---|-----------------------|
|    | Power   |    | Power            |    | Menu     |    | Menu / Home           |
|    | Mute    |    | Mute / Dimmer    |    | Source   |    | AV / Input / RDS      |
|    | 1       |    | 1                |    | Up       |    | Up                    |
|    | 2       |    | 2                |    | Left     |    | Left                  |
|    | 3       |    | 3                |    | Enter    |    | OK                    |
|    | 4       |    | 4                |    | Right    |    | Right                 |
|    | 5       |    | 5                |    | Down     |    | Down                  |
|    | 6       |    | 6                |    | Exit     |    | Exit / Cancel / Clear |
|    | 7       |    | 7                |    | Display  |    | Display / Media       |
|    | 8       |    | 8                |    | Vol+     |    | Vol+                  |
|   | 9       |   | 9                |   | Vol-     |   | Vol-                  |
|  | 0       |  | 0                |  | MTS      |  | Info / Angle          |
|  | DTV/ATV |  | D.Menu / Top     |  | Rec List |  | Smart / List          |
|  | Recall  |  | Back / Return    |  | CH+      |  | CH+ / Page+           |
|  | P.Mode  |  | Picture / Format |  | CH-      |  | CH- / Page-           |
|  | S.Mode  |  | Sound / Title    |  | FAV/List |  | Fav / Marker / PC     |
|  | Sleep   |  | Sleep / Timer    |  | Rec      |  | Rec / Rec Mode        |



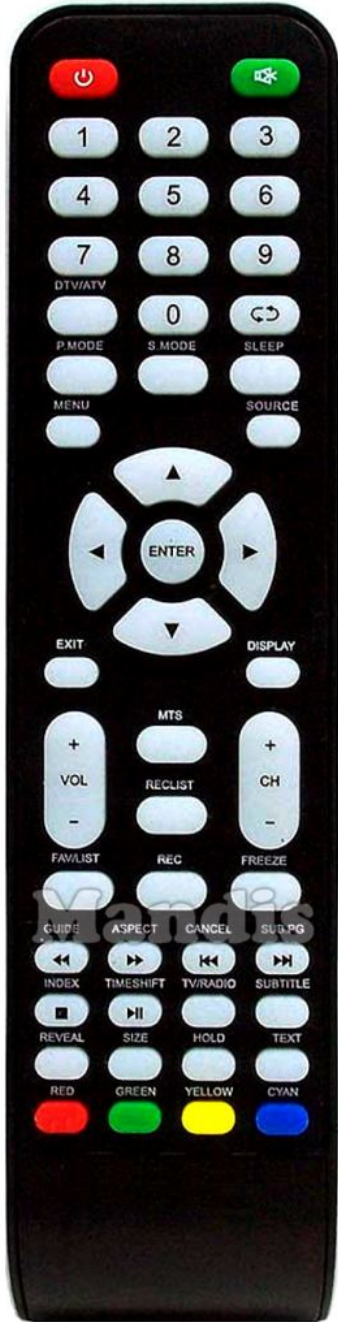 

| Original   | Recharge  | Original   | Recharge  |
|--|---|--|---|
|  Freeze                 |  Pause / Step / Freeze         |  Green  |  Green / APP / Repeat        |
|  Guide                  |  Guide / EPG / -/-             |  Yellow |  Yellow / YouTube / Repeat   |
|  <<                     |  << / Tune-                    |  Cyan   |  Blue / Prime Video / Random |
|  >> / Aspect            |  >> / Tune+                    |  |   |
|  >> / Aspect            |  Shift + Picture / Format      |  |   |
|  I<< / Cancel           |  I<< / Preset-                 |  |   |
|  I<< / Cancel           |  Shift + Exit / Cancel / Clear |  |   |
|  >>I / Sub.PG           |  >>I / Preset+                 |  |   |
|  Stop / Index           |  Stop / Hold                   |  |   |
|  Play/Pause / Timeshift |  Play / Slow                   |  |   |
|  Tv/Radio              |  TV/Radio /                   |  |   |
|  Subtitle             |  Subtitle / EQ               |  |   |
|  Reveal               |  Eject / Surround            |  |   |
|  Size                 |  Zoom / Size                 |  |   |
|  Hold                 |  Shift + Stop /              |  |   |
|  Text                 |  Text / Goto                 |  |   |
|  Red                  |  Red / Netflix / Search      |  |   |

