 

 

 

 



 





 

 



 

 

 

 









Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 AV / S / SCART	 AV / Input / RDS
 HDTV / PC / HDMI	 Shift + Fav / Marker / PC
 TV / DTV	 TV/Radio /
 Index / Select	 OK
 Guide / Sub Page	 Shift + Guide / EPG / -/--
 Teletext / Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 Menu	 Menu / Home
 Right	 Right
 Down	 Down

Original	Recharge
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 -/--	 Guide / EPG / -/--
 0	 0
 Return	 Back / Return
 Vol-	 Vol-
 Surround	 Eject / Surround





Original	Recharge	Original	Recharge
 Wide	 Picture / Format		
 Sound	 Sound / Title		
 Display	 Display / Media		
 Subtitle	 Subtitle / EQ		
 Video Mode	 Setup / OPT /		
 Text	 Text / Goto		
 Info	 Info / Angle		
 Audio Mode	 Audio / Lang I/II		
 Favorites	 Fav / Marker / PC		
 List	 Smart / List		
 Hold	 Stop / Hold		

Original	Recharge	Original	Recharge

