



Original		Rechange		Original		Rechange	
	Standby		Shift + Power		2		2
	System Power		Power		HALL		Audio / Lang I/II
	CD		Shift + 3		3		3
	MD / CD-R		Shift + 8		Jazz		Subtitle / EQ
	TUNER		Shift + 6		4		4
	DVD		Shift + 2		Rock		Eject / Surround
	DTV/CBL		Shift + 1		Music		Picture / Format
	V-AUX		Shift + 7		5		5
	Multi CH In		Shift + 5		Entertain		Zoom / Size
	VCR 1		Shift + 4		6		6
	DVR / VCR2		Shift + 9		7		7
	Sleep		Sleep / Timer		TV Thtr		TV/Radio /
	Volume+		Vol+		Movie		D.Menu / Top
	Volume-		Vol-		8		8
	Mute		Mute / Dimmer		Dolby DTS		Setup / OPT /
	Stereo		Sound / Title		9		9
	1		1		Night		Text / Goto





	Original	Recharge
	0	0
	EX/ES	AV / Input / RDS
	Straight / Effect	<< / Tune-
	Enter	Fav / Marker / PC
	Level	Guide / EPG / -/--
	Up	Up
	Preset/CH-	CH- / Page-
	Preset/CH-	<< / Preset-
	Set Menu	Menu / Home
	A/B/C/D/E	Smart / List
	Left	Left
	Select	OK
	Right	Right
	Preset/CH+	CH+ / Page+
	Down	Down
	Preset/CH+	>> / Preset+
	FREQ/RDS	Red / Netflix / Search

	Original	Recharge
	PTY Seek Mode	Green / APP / Repeat
	PTY Seek Start	Yellow / YouTube / Repeat
	EON	Blue / Prime Video / Random

