

NOKIA
TDT
211S02

Mandis Shop S.L.
Sant Cugat del Vallès (Barcelona)
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
⏻	Power		P/Ch + ⏩	P+	
MUTE			P/Ch - ⏪	P-	
1 ..?	1		VOL +	Vol+	
2 ABC	2		VOL -	Vol-	
3 DEF	3		▲	Up	
4 GHI	4		▼	Down	
5 JKL	5		OK	Select	
6 MNO	6		◀	Left	
7 PQRS	7		▶	Right	
8 TUV	8		MENU	Navi	
9 WXYZ	9		EXIT RETURN		
0/10	0		🔊 TOP MENU		
1. GUIDE			PICT TITLE	OPT	
2. FAV			≡X ◀ EPG	Guide	
P/C			≡? ▶	Play	
AUTO/TRK			≡X ■	Stop	
SUBT			≡◄ ZOOM		
AV Dvd/Tv			⏸	Pause	
Info	Info		RED ●	Red	Rec
TEXT	TXT		GREEN ◀	Green	
TV			YELLOW ▶	Yellow	
BACK	Back		BLUE ▶▶	Blue	