

SAMPO  
TV  
RC-327ST

Mandis Shop S.L.  
Sant Cugat del Vallès (Barcelona)  
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	mute		EXIT		
1	1		BACK	Back	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	Info	
5	5		PAV( ISI)	[←]	
6	6		CH+	CH+	
7	7		CH-	CH-	
8	8		TEXT	[= =]	
9	9		< ?	I/II	) ( /S.Mode
0	0		...		
VOID	USB		TV/RADIO	Folder	
MENU	Menu		CFI+	Timer	
>PLAY	Play/Pause		SOURCE	Source	
PAUSE	[II]		W-FORMAT	[//]	
[ STOP	Stop		WIDE		P.Mode
oRECORD	Rec				
<<					
>>					
<<					
>>					
RFD	Red				
GRFN	Green				
YELLOW	Yellow				
BLUE	Blue				
MEDIA					
EPG/GUIDE	Hand				
OK	OK				
^	Up				
<	Left				
>	Right				