

 
 


 
 
 


 

 



 
 

 

 
 
 
 
 

 

 
 
 

 
 
 
 
 
 
 

 

 


 
 

 
 
 
 
 

 

 

 

 
 
 
 
 
 




	Original	Replacement		Original	Replacement
	Power	 On		4	 4 / VGA1
	Menu	 Menu / Info		5	 5 / VGA2
	E-Zoom+	 KS Up		6	 6 / Comp
	E-Zoom-	 KS Down		7	 7 / S-Vid
	Up	 Up		8	 8 / Video
	Down	 Down		9	 9 / HDMI
	Right	 Right		0	 0 / Lan
	Left	 Left		Auto	 Auto / Mode
	Enter	 OK		S-Video	 Shift + 7 / S-Vid
	Esc	 Exit / Lamp		Video	 Shift + 8 / Video
	?/Help	 OFF		Comp 2	 Shift + 6 / Comp
	Vol+	 Vol +		Pointer	 K.S. / PIP
	Vol-	 Vol -		AV Mute	 Mute / Focus
	Source/Search	 SRC / Search		Freeze	 Pict / Freeze
	1	 1 / Point		Color Mode	 Hide / Blank
	2	 2		Resize	 Aspect / Re-Sync
	3	 3		Comp 1	 -- / USB

