
 
 





 



 



 







 



 
 
 

 




 











 



 





 

 



 

 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat



 





Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 SHIFT	 SHIFT
 TV	 DVD	 SLOW	 STEP-FREEZE
 DVD	 SAT	 HOLD	 REC MODE
 SAT	 AUX	 TUNE-	 TUNE+
 AUX	 PRESET-	 PRESET+	 PRESET+
 PRESET-	 PRESET+	 TITLE	 LANG UII
 PRESET+	 EQ	 SURROUND	 SURROUND
 TITLE	 SOUND	 AUDIO	 SUBTITLE
 LANG UII	 FORMAT	 SIZE	 TIMER
 EQ	 ZOOM	 SLEEP	 PROGRAM
 SURROUND	 TOP MENU	 OPT-TOOLS	 GOTO
 SOUND	 D.MENU	 SETUP	 TEXT
 FORMAT	 HOME	 ANGLE	 INFO
 SIZE	 MENU	 OK	 OK
 TIMER	 Left	 Left	 Left
 PROGRAM	 Right	 Right	 Right
 TV RADIO	 EXIT	 EXIT	 EXIT
 RDS	 CANCEL	 CANCEL	 RETURN
 AV INPUT	 LIST	 LIST	 SMART
 HOME	 SMART	 MEDIA	 CH PAGE
 ANGLE	 DISPLAY	 DISPLAY	 CH PAGE
 INFO	 TV	 DVD	 CD - STB
 OK	 1	 2	 3
 Left	 VIDEO 4	 TAPE 5	 TUNER 6
 Right	 AUX - HDD 7	 USB 8	 BLUETOOTH 9
 EXIT	 GUIDE EPG	 HDMI - BAT	 PC
 CANCEL	 NETFLIX	 APP	 FAV MARKER
 LIST	SEARCH	YouTube	PRIME Video
 SMART	REPEAT	RANDOM	RANDOM
 MEDIA	Mandis SHOP	www.mandis.tv	





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subpage	 Setup / OPT /
 Stop	 Stop / Hold
 Hold	 Shift + Stop / Hold

Hold

Original	Replacement
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

