



Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [I]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 I<< / [≡+]	 I<< / Preset-	 EPG	 Guide / EPG / -/-
 >>I / [≡..]	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1
























	Original	Replacement
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	Audio	Audio / Lang I/II
	0	0
	Recall	Back / Return

	Original	Replacement


















 



 

Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<</Hold	 << / Tune-		
>>/Index	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
Nicam/A2	 Audio / Lang I/II		
Subtitle	 Subtitle / EQ		
Subpage	 Eject / Surround		
Size	 Zoom / Size		
Sleep	 Sleep / Timer		
DTV/Radio	 TV/Radio /		
Reveal	 D.Menu / Top		

Original	Replacement	Original	Replacement
TXT/MIX	 Text / Goto		
Menu	 Menu / Home		
Up	 Up		
Info	 Info / Angle		
Left	 Left		
Enter	 OK		
Right	 Right		
Cancel	 Exit / Cancel / Clear		
Down	 Down		
Back	 Back / Return		
Vol+	 Vol+		
List	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Mode	 Display / Media		
CH-	 CH- / Page-		
1	 1		






Original	Replacement	Original	Replacement
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
EPG		Guide / EPG / -/--	
0		0	0
FAV		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
<</Hold		Shift + Stop /	
FAV-		Shift + Left	

Original	Replacement	Original	Replacement
FAV+		Shift + Right	
-/--		Shift + Guide / EPG / -/--	














 




Original	Replacement
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡⇅]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡⇅]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Original	Replacement
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 +  Shift + Pause / Step /		

