



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	0
	Exit / Cancel / Clear
	Shift + Guide / EPG / -/--
	CH+ / Page+
	Info / Angle

Original	Replacement
	Vol+
	CH- / Page-
	Audio / Lang I/II
	Vol-
	Up
	Left
	OK
	Right
	Menu / Home
	Down
	TV/Radio /
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Sleep / Timer





Original	Replacement
[=+]/[X]	<< / Tune-
[=x]/[··]	>> / Tune+
[·]/[*]	<< / Preset-
[=◇]/[+]/Wide	Picture / Format
[=?]	>> / Preset+
[=i]/Guide	Guide / EPG / -/-
P<P/SWAP	Fav / Marker / PC
PP	Back / Return

Original	Replacement

