

A black Mandis TV remote control. At the top, there is a blue 'SHIFT' button and a red power button. Below these are four buttons: TV, DVD, SAT, and AUX. The main keypad consists of three rows of three buttons each, labeled 1-9, with additional text like 'ABC', 'DEF', 'GHI', etc. Below the keypad are 'MENU' and 'INFO' buttons. In the center is a circular navigation pad with an 'OK' button and four directional arrows. Below the navigation pad are 'EXIT' and 'BACK' buttons. Further down are volume (+/-) and channel (+/-) buttons, along with 'MUTE', 'VOD', and 'MEDIA' buttons. Below these are 'OPT+', a speaker icon with a question mark, a 'TV/R' button, and 'TEXT', 'SRC', 'V-FOR', and 'WIDE' buttons. At the bottom are four colored buttons (A, B, C, D) and a set of five playback control buttons (play, pause, stop, previous, next). The Mandis logo and website are at the very bottom.