


 





 


 
 


 
 








Original	Replacement	Original	Replacement
 Power	 Power	 CEC	 Smart / List
 1	 1	 ?	 D.Menu / Top
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Back	 Back / Return
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 FAV	 Fav / Marker / PC	 Guide	 Guide / EPG / -/-
 0	 0	 Tools	 Setup / OPT /
 TXT	 Text / Goto	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Source	 AV / Input / RDS
 Green	 Green / APP / Repeat	 PR+	 CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	 PR-	 CH- / Page-		
	 I<	 I<< / Preset-		
	 >I	 >>I / Preset+		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		
	 [<>]	 Picture / Format		
	 Dialog	 Audio / Lang I/II		
	 [...]	 Subtitle / EQ		
	 Tv/Radio	 TV/Radio /		
	 My Media	 Display / Media		

