





Original	Replacement	Original	Replacement
 POWER	 Power	 9 wxyz	 9
 ←○	 Shift + Smart / List	 TV	 TV/Radio /
 ∗*/0	 Shift + Display / Media	 0	 0
 ∗²/♀	 Shift + Red / Netflix /	 ↔	 Shift + Back / Return
 SOURCE	 AV / Input / RDS	 TV GUIDE	 Guide / EPG / -/-
 PRESETS	 Smart / List	 [≡]	 Text / Goto
 ≡≡≡	 Setup / OPT /	 MENU	 Menu / Home
 ♪/☺/▣	 Display / Media	 Q.MENU	 D.Menu / Top
 SLEEP	 Sleep / Timer	 UP	 Up
 1 . / @	 1	 LEFT	 Left
 2 abc	 2	 OK	 OK
 3 def	 3	 RIGHT	 Right
 4 ghi	 4	 DOWN	 Down
 5 jkl	 5	 BACK	 Back / Return
 6 mno	 6	 →◻←	 Picture / Format
 7 pqrs	 7	 EXIT	 Exit / Cancel / Clear
 8 tuv	 8	 ∗FAV	 Fav / Marker / PC





Original	Replacement
 VOL+	 Vol+
 MUTE	 Mute / Dimmer
 P+	 CH+ / Page+
 VOL-	 Vol-
 INFO	 Info / Angle
 P-	 CH- / Page-
 REC	 Rec / Rec Mode
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 LANG.	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 [≡]...	 Sound / Title
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Original	Replacement
 BLUE	 Blue / Prime Video / Random

