







 



 






 










 

 
 




 
 















Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/ Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 REC MODE	 TUNE-	 TUNE+
 ENERGY SAVING	 PRESET-	 PRESET+	 HOLD
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	 MENU
 CLEAR	 RETURN	 OK	 EXIT
 CANCEL	 LIST	 VOL+	 SMART
 MENU	 MEDIA	 CH PAGE	 DISPLAY
 TV	 DISPLAY	 TV	 DVD
 VIDEO	 TV	 DVD	 CD - STB
 AUX - HDD	 USB	 1	 2
VIDEO	 TUNER	 3	 4
AUX - HDD	USB	5	6
VIDEO	TUNER	6	7
AUX - HDD	USB	7	8
VIDEO	TUNER	8	9
AUX - HDD	USB	9	0
VIDEO	TUNER	0	GUIDE EPG
LIST	SMART	GUIDE EPG	HDMI - BAT
0	HDMI - BAT	HDMI - BAT	FAV MARKER
Q.VIEW	MEDIA DISPLAY	MEDIA DISPLAY	NETFLIX
			APP
			YouTube
			Prime Video
			SEARCH
			REPEAT
			REPEAT A-B
			RANDOM
			Mandis SHOP
			www.mandis.tv



