



Original		Replacement		Original		Replacement	
	Power		Power		S.Mode		Sound / Title
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	1		1		CH-		CH- / Page-
	2		2		Source		AV / Input / RDS
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		Exit		Exit / Cancel / Clear
	8		8		Down		Down
	9		9		Menu		Menu / Home
	0		0		Rec		Rec / Rec Mode
	CH.List		Smart / List		Timeshift		Display / Media
	Recall		Back / Return		Timer		Shift + Sleep / Timer
	Vol+		Vol+		Rec.List		Shift + Rec / Rec Mode
	Vol-		Vol-		Red/DVD Setup		Red / Netflix / Search
	PIC.Mode		Picture / Format		Green/Repeat		Green / APP / Repeat





Original	Replacement
Yellow/Languag	Yellow / YouTube / Repeat
Blue/DVD Menu	Blue / Prime Video / Random
Title/Aspect	Guide / EPG / -/--
Zoom/Tv/Radio	TV/Radio /
Sleep	Sleep / Timer
Subtitle	Subtitle / EQ
Prog/Index	D.Menu / Top
A-B/Reveal	Setup / OPT /
Step/Audio	Audio / Lang I/II
Info/Display	Info / Angle
Text	Text / Goto
Eject	Eject / Surround
Size	Zoom / Size
Play	Play / Slow
Subpage	Fav / Marker / PC
Pause	Pause / Step / Freeze
Hold	Shift + Stop / Hold

Original	Replacement
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+

