













 









 




 


 









 









 







 











 







Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		Guide		Guide / EPG / -/--
	Power		Power		Up		Up
	Theatre		Sleep / Timer		[i+]		Info / Angle
	<<		<< / Tune-		Left		Left
	Play		Play / Slow		OK		OK
	>>		>> / Tune+		Right		Right
	Sync Menu		D.Menu / Top		Return		Back / Return
	I- Manual		I<< / Preset-		Down		Down
	Stop		Stop / Hold		Options		Setup / OPT /
	>>I		>>I / Preset+		Home		Menu / Home
	I-Manual		TV/Radio /		Red		Red / Netflix / Search
	Scene		Picture / Format		Green		Green / APP / Repeat
	[+]		Zoom / Size		Yellow		Yellow / YouTube / Repeat
	Digital/Analog		Smart / List		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		1		1
	Internet/Video		Display / Media		2		2
	FAV		Fav / Marker / PC		3		3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Goto				
	0		0				
	Subtitle		Subtitle / EQ				
	Vol+		Vol+				
	Pr+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Audio		Audio / Lang I/II				
	Vol-		Vol-				
	Pr-		CH- / Page-				

