






 







Original	Replacement
 Open/Close	 Eject / Surround
 Standby	 Power
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 Prog/Direct	 TV/Radio /
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 Call	 Text / Goto
 +10	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Search	 Red / Netflix / Search
 Dimmer	 Mute / Dimmer
 Input Up AMP	 CH+ / Page+
 Power AMP	 Shift + Power
 Mute AMP	 Shift + Mute / Dimmer
 Vol+ AMP	 Vol+
 Input Down	 CH- / Page-
 Vol- AMP	 Vol-
 Top Menu	 D.Menu / Top
 Up	 Up
 PopUp Menu	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /





Original	Replacement	Original	Replacement
 Home	 Menu / Home	 Page/DVD A	 AV / Input / RDS
 Stop	 Stop / Hold	 Layer/Disc	 Display / Media
 Pause	 Pause / Step / Freeze	 ADJ./Picture	 Picture / Format
 Play	 Play / Slow	 Red	 Shift + Red / Netflix /
 I<<	 I<< / Preset-	 Green	 Shift + Green / APP /
 >>I	 >>I / Preset+	 Yellow	 Shift + Yellow / YouTube /
 <<	 << / Tune-	 Blue	 Shift + Blue / Prime
 >>	 >> / Tune+	 YouTube	 Shift + 1
 Camera/Angle	 Shift + Info / Angle	 Netflix	 Shift + 2
 [...] / Subtitle	 Subtitle / EQ	 Widi	 Shift + 3
 O)) / Audio	 Audio / Lang I/II		
 Option	 Shift + Setup / OPT / Tools		
 Repeat	 Green / APP / Repeat		
 Repeat A-B	 Yellow / YouTube / Repeat		
 X/Random	 Blue / Prime Video / Random		
 Pure	 Sound / Title		
 Resolution	 Zoom / Size		





Original	Replacement
Open/Close	Eject / Surround
Standby	Power
Info	Info / Angle
1	1
2	2
3	3
Prog/Direct	TV/Radio /
4	4
5	5
6	6
Clear	Exit / Cancel / Clear
7	7
8	8
9	9
Call	Text / Goto
+10	Guide / EPG / -/--
0	0

Original	Replacement
Search	Red / Netflix / Search
Dimmer	Mute / Dimmer
Input Up AMP	CH+ / Page+
Power AMP	Shift + Power
Mute AMP	Shift + Mute / Dimmer
Vol+ AMP	Vol+
Input Down	CH- / Page-
Vol- AMP	Vol-
Top Menu	D.Menu / Top
Up	Up
PopUp Menu	Smart / List
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /





Original		Replacement		Original		Replacement	
	Home		Menu / Home		Page/DVD A		AV / Input / RDS
	Stop		Stop / Hold		Layer/Disc		Display / Media
	Pause		Pause / Step / Freeze		ADJ./Picture		Picture / Format
	Play		Play / Slow		Red		Shift + Red / Netflix /
	I<<		I<< / Preset-		Green		Shift + Green / APP /
	>>I		>>I / Preset+		Yellow		Shift + Yellow / YouTube /
	<<		<< / Tune-		Blue		Shift + Blue / Prime
	>>		>> / Tune+		YouTube		Shift + 1
	Camera/Angle		Shift + Info / Angle		Netflix		Shift + 2
	[...]/Subtitle		Subtitle / EQ		Widi		Shift + 3
	O)/Audio		Audio / Lang I/II				
	Option		Shift + Setup / OPT / Tools				
	Repeat		Green / APP / Repeat				
	Repeat A-B		Yellow / YouTube / Repeat				
	X/Random		Blue / Prime Video / Random				
	Pure		Sound / Title				
	Resolution		Zoom / Size				

