 




Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 Anyview Cast	 Smart	 Menu	 Menu
 Anyview Cast Off	 Media	 HiSmart	 Options
 DMP	 Dual	 Up	 Up
 Source	 AV	 Down	 Down
 I<<	 I<<	 Right	 Right
 Stop	 Stop	 Left	 Left
 >>I	 >>I	 OK	 Ok
 <<	 <<	 Return	 Back
 Play	 Play	 Exit	 Exit
 >>	 >>	 CH List	 List
 PVR	 TV/R	 EPG	 Guide
 Pause	 Pause	 Vol+	 Vol +
 FAV	 Shift + Pre Ch	 Vol-	 Vol -
 Red	 Red	 CH+	 Ch +
 Green	 Green	 CH-	 Ch -





Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
INFO	DISPLAY INFO Info
PRE CH	FAV PRE-CH Pre Ch
I/II LANG.	ZOOM Eject
P.MODE	ECO 3D 3D
S.MODE	SHIFT + SOUND DUAL Shift + Dual
SIZE	PICTURE FORMAT Format
SUBT.	AD SUBT Subt

Original	Replacement
TEXT	REPEAT TEXT Text
INDEX	E-MANUAL D.MENU D. Menu
SUB PAGE	PROG SLEEP Sleep

