 




 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Internet		Smart / List
	Source		AV / Input / RDS
	Lang		Audio / Lang I/II
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	LIB		Picture / Format
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	i		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	P:::P		Display / Media
	PR+		CH+ / Page+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	PR-		CH- / Page-
	1		1





	Original	Replacement
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	Text	Text / Goto
	0	0
	Guide	Guide / EPG / -/--

Original	Replacement

