 



 











 



 



 

 

 

 

 



 

 

 



 



 

 

 







 











	Original	Replacement		Original	Replacement
	Power	 Power		3	 3
	[i+]	 Info / Angle		4	 4
	P.Info	 Display / Media		5	 5
	ATV	 Shift + Smart / List		6	 6
	DTV	 Smart / List		7	 7
	SAT	 Shift + 0		8	 8
	Radio	 TV/Radio /		9	 9
	Power Source	 Shift + Power		Return	 Shift + Back / Return
	<< Source	 << / Tune-		0	 0
	Play Source	 Play / Slow		Source	 AV / Input / RDS
	>> Source	 >> / Tune+		I/II/I-II	 Audio / Lang I/II
	Option Source	 Setup / OPT /		[<I>]	 Picture / Format
	Rec Source	 Rec / Rec Mode		AV Mode	 Shift + AV / Input / RDS
	Rec Stop	 Pause / Step / Freeze		Eco	 Sound / Title
	Stop Source	 Stop / Hold		Mute	 Mute / Dimmer
	1	 1		Vol+	 Vol+
	2	 2		PR+	 CH+ / Page+



