 








 



 






 










 



 









 

 

 

 

 



 

 

 







Original	Replacement	Original	Replacement
	 Power		 4
	 Red / Netflix / Search		 5
	 Green / APP / Repeat		 6
	 Yellow / YouTube / Repeat		 7
	 Blue / Prime Video / Random		 8
	 Exit / Cancel / Clear		 9
	 Sleep / Timer		 Picture / Format
	 Stop / Hold		 0
	 Smart / List		 Shift + Guide / EPG / -/--
	 Text / Goto		 Vol-
	 Setup / OPT /		 Vol+
	 Menu / Home		 Mute / Dimmer
	 Shift + Info / Angle		 CH- / Page-
	 Guide / EPG / -/--		 CH+ / Page+
	 1		 Info / Angle
	 2		 TV/Radio /
	 3		 AV / Input / RDS





	Original	Replacement		Original	Replacement
	I-II	Audio / Lang I/II			
	PP	Back / Return			
	Up	Up			
	Left	Left			
	OK	OK			
	Right	Right			
	M	D.Menu / Top			
	Down	Down			

