 






 

 


 

 

 

 

 

 

 

 

 

 
 
 





Original	Replacement
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 Red/O Lang	 Red / Netflix / Search





Original	Replacement	Original	Replacement
Red/O) Lang	Audio / Lang I/II		
Green/Subtitles	Subtitle / EQ		
Green/Subtitles	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Violet/Text	Text / Goto		
Stop Text	Shift + Stop /		
??? Text	Sleep / Timer		
Zoom Text	Zoom / Size		
Media/Digital	Display / Media		
<<	<< / Tune-		
Play	Play / Slow		
>>	>> / Tune+		
T-Link	D.Menu / Top		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		





Original	Replacement
	Power
	Smart / List
	Shift + 1
	Shift + 2
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	Shift + Guide / EPG / -/-
	Exit / Cancel / Clear
	Menu / Home

Original	Replacement
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/-
	Back / Return
	Info / Angle
	Vol+
	Setup / OPT /
	CH+ / Page+
	Vol-
	CH- / Page-
	Mute / Dimmer
	Audio / Lang I/II
	Red / Netflix / Search
	Subtitle / EQ





	Original	Replacement	Original	Replacement
	Green/Subtitles	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Violet/Text	 Text / Goto		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		



 
 




 



 
 







 
 


Original	Replacement
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	Shift + Guide / EPG / --
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / --
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
PR +	CH+ / Page+
Vol -	Vol-
PR -	CH- / Page-
Mute	Mute / Dimmer
Red / A-B	Shift + Yellow / YouTube /
Red / A-B	Red / Netflix / Search





Original	Replacement
 Green / Subtitles	 Green / APP / Repeat
 Green / Subtitles	 Subtitle / EQ
 Yellow / Size	 Yellow / YouTube / Repeat
 Yellow / Size	 Zoom / Size
 Blue / Lang	 Blue / Prime Video / Random
 Blue / Lang	 Audio / Lang I/II
 Purple / Text	 Text / Goto
 Text Stop	 Shift + Stop /
 Text ???	 Sleep / Timer
 Text Zoom	 Shift + Zoom /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Original	Replacement

