





Original	Replacement	Original	Replacement
0	 Eject / Surround		 Text / Goto
-0-	 Subtitle / EQ		 Left
Power	 Power		 Up
Rec	 Rec / Rec Mode		 Right
I<<	 I<< / Preset-		 OK
Red	 Red / Netflix / Search		 Down
Green/[[]]	 Green / APP / Repeat		 Vol+
Stop	 Stop / Hold		 Mute / Dimmer
Play	 Play / Slow		 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat		 Vol-
>>I	 >>I / Preset+		 Sound / Title
AV/[?]	 AV / Input / RDS		 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II		 Smart / List
[<>]/[+]	 Zoom / Size		 1
PIP [■]	 Picture / Format		 2
Menu	 Menu / Home		 3
Pause	 Pause / Step / Freeze		 4

Original	Replacement	Original	Replacement
0	 Eject / Surround		 Text / Goto
-0-	 Subtitle / EQ		 Left
Power	 Power		 Up
Rec	 Rec / Rec Mode		 Right
I<<	 I<< / Preset-		 OK
Red	 Red / Netflix / Search		 Down
Green/[[]]	 Green / APP / Repeat		 Vol+
Stop	 Stop / Hold		 Mute / Dimmer
Play	 Play / Slow		 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat		 Vol-
>>I	 >>I / Preset+		 Sound / Title
AV/[?]	 AV / Input / RDS		 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II		 Smart / List
[<>]/[+]	 Zoom / Size		 1
PIP [■]	 Picture / Format		 2
Menu	 Menu / Home		 3
Pause	 Pause / Step / Freeze		 4





Original	Replacement
	Power
	Subtitle / EQ
	I<< / Preset-
	>>I / Preset+
	AV / Input / RDS
	Audio / Lang I/II
	Zoom / Size
	Pause / Step / Freeze
	Text / Goto
	Left
	Up
	Right
	OK
	Down
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Replacement
	Vol-
	Sound / Title
	CH- / Page-
	Smart / List
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Fav / Marker / PC

