 






 



 

 







 


 




 



 







 



 
 
 

 




 















 


 

 

 
 
 

 
 


 
 


 
 


 


 

 


 
 
 
 
 
 
 

 









Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Open/Close	 Eject	 9	 9
 Mode/HDMI	 Shift + AV	 0	 0
 Reso/Resolution	 Shift + TV/R	 +10	 Guide
 Home	 Smart	 Call	 Pre Ch
 Pure/Pure Direct	 Shift + Subt	 Input Up	 Ch +
 Mode/Sound	 Sleep	 Input Down	 Ch -
 P/D/Prog Direct	 Shift + Options	 Power Amp	 Shift + Power
 ADJ./Pict.	 Shift + Format	 Mute	 Mute
 CLR/Clear	 Exit	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Top Menu	 Menu
 3	 3	 Pop Up Menu	 Media
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 Right	 Right

 






 



 

 







 


 




 



 







 



 
 
 

 




 

















Original	Replacement	Original	Replacement
 Down	 Down	 Repeat A-B	 Shift + Text
 Setup	 Options	 Random	 Format
 Return	 Back	 Disp/Display	 Info
 S/Search	 AV	 Dimm./Dimmer	 3D
 Stop	 Stop	 Red	 Red
 Pause	 Pause	 Green	 Green
 Play	 Play	 Yellow	 Yellow
 I<<	 I<<	 Blue	 Blue
 >>I	 >>I		
 <<	 <<		
 >>	 >>		
 Camera/Angle	 List		
 [...] / Subtitle	 Subt		
 O))) / Audio	 Dual		
 Page	 TV/R		
 Mode	 D. Menu		
 Repeat All	 Text		




 
 

 
 





 
 

 





 
 
 
 
 
 

 


 
 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Open/Close	 Eject	 9	 9
 Mode/HDMI	 Shift + AV	 0	 0
 Reso/Resolution	 Shift + TV/R	 +10	 Guide
 Home	 Smart	 Call	 Pre Ch
 Pure/Pure Direct	 Shift + Subt	 Input Up	 Ch +
 Mode/Sound	 Sleep	 Input Down	 Ch -
 P/D/Prog Direct	 Shift + Options	 Power Amp	 Shift + Power
 ADJ./Pict.	 Shift + Format	 Mute	 Mute
 CLR/Clear	 Exit	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Top Menu	 Menu
 3	 3	 Pop-Up Menu	 Media
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 Right	 Right





Original	Replacement	Original	Replacement
	Down		Down
	Setup		Options
	Return		Back
	S/Search		AV
	Stop		Stop
	Pause		Pause
	Play		Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Camera/Angle		List
	[...]/Subtitle		Subt
	O)))/Audio		Dual
	Page		TV/R
	Mode		D. Menu
	Repeat All		Text
	Repeat A-B		Shift + Text
	Random		Format
	Disp/Display		Info
	Dimm./Dimmer		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

