


 






 


 

 



 
 





 




 



 
 


 




 
 






 


 

 














Original	Replacement	Original	Replacement
 Power	 Power	 ▼/O)/I/I+II	 Dual
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Mute	 Mute
 4	 4	 P+	 Ch +
 5	 5	 P-	 Ch -
 6	 6	 P.Info	 Info
 7	 7	 [i+]	 List
 8	 8	 AV Mode	 Format
 9	 9	 [<>]	 Eject
 0	 0	 Eco	 3D
 Recall	 Pre Ch	 Menu	 Menu
 Source	 AV	 Up	 Up
 ATV	 Shift + Smart	 Down	 Down
 DTV	 Smart	 Right	 Right
 EPG	 Guide	 Left	 Left
 Radio	 TV/R	 OK	 Ok





Original	Replacement	Original	Replacement
	End		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[≡?]	+	Shift + Subt
	[...]		Subt
	[≡+]	+	Shift + Options
	[≡o]	+	Shift + Dual
	[≡◆]	+	Shift + TV/R
	Sleep		Sleep
	Power Aquos Link	+	Shift + Power
	<<		<<
	Play		Play
	>>		>>

