



Original	Replacement	Original	Replacement
Source	AV / Input / RDS	>10	Guide / EPG / -/--
Power	Power	0/10	0
DVD	Red / Netflix / Search	C	Exit / Cancel / Clear
TUN	Green / APP / Repeat	Tv Vol+	Shift + Vol+
V1	Blue / Prime Video / Random	Tv Vol-	Shift + Vol-
V2	Shift + Blue / Prime	Up/FQ+	Up
A1	Yellow / YouTube / Repeat	Up/FQ+	>> / Tune+
A2	Shift + Red / Netflix /	Left/ST-	Left
1	1	Left/ST-	I<< / Preset-
2	2	Right/ST+	Right
3	3	Right/ST+	>>I / Preset+
4	4	Down/FQ-	Down
5	5	Down/FQ-	<< / Tune-
6	6	Band	Display / Media
7	7	Station Memory	Smart / List
8	8	Mono	Audio / Lang I/II
9	9	1 Tv	Shift + 1





Original	Replacement
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 >10 Tv	 Shift + Guide / EPG / -/-
 0/10 Tv	 Shift + 0
 C Tv	 Shift + Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Up Tv	 Shift + Up
 Left Tv	 Shift + Left
 Enter Tv	 Shift + OK
 Right Tv	 Shift + Right
 Down Tv	 Shift + Down

Original	Replacement
 Menu Tv	 Shift + Menu /
 Stop Tv	 Shift + Stop /
 Play Tv	 Shift + Play /
 Pause Tv	 Shift + Pause / Step /
 Rec Tv	 Shift + Rec / Rec Mode
 I<< Tv	 Shift + I<< / Preset-
 >>I Tv	 Shift + >>I / Preset+
 CH- Tv	 Shift + CH- /
 CH+ Tv	 Shift + CH+ /
 << Tv	 Shift + << /
 >> Tv	 Shift + >> /
 PGM Tv	 Shift + D.Menu / Top Menu
 RDM Tv	 Shift + Subtitle / EQ
 Disp Tv	 Shift + Display / Media
 Last Memory Tv	 Shift + Back / Return



 





















 

 



















 



 

 










 








Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		Sleep		Sleep / Timer
	Power		Power		6		6
	DVD		Green / APP / Repeat		Time/Clock ADJ		Shift + Sleep / Timer
	TUN		Red / Netflix / Search		7		7
	V1		Blue / Prime Video / Random		[I]/DTS		Picture / Format
	V2		Shift + Blue / Prime		8		8
	A1		Yellow / YouTube / Repeat		Test Tone		Text / Goto
	A2		Shift + Red / Netflix /		9		9
	1		1		CH Select		Shift + Smart / List
	Midnight		Zoom / Size	>10 button icon"/>	>10		Guide / EPG / -/--
	2		2	>10 button icon"/>	Sound Control		Sound / Title
	P.Bass		Eject / Surround		0/10		0
	3		3		DSP		Setup / OPT /
	Function		Smart / List		C		Fav / Marker / PC
	4		4		Enter/Disc / DSP		Shift + OK
	FL Dimmer		Shift + Mute / Dimmer		TV CH+		Shift + CH+ /
	5		5		Tv Vol+		Shift + Vol+





Original	Replacement	Original	Replacement
 System	 Vol+	 Return	 Back / Return
 TV CH-	 Shift + CH- /	 Page-	 I<< / Preset-
 Tv Vol-	 Shift + Vol-	 Page+	 >>I / Preset+
 System	 Vol-	 <II/CH-	 CH- / Page-
 Tv Input	 Shift + AV / Input / RDS	 II>/CH+	 CH+ / Page+
 Power Tv	 Shift + Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Up/FQ+	 Up	 Top Menu	 D.Menu / Top
 Left/ST-	 Left	 PGM	 TV/Radio /
 Enter	 OK	 Subtitle	 Subtitle / EQ
 Right/ST+	 Right	 RDM	 Shift + Display / Media
 Down/FQ-	 Down	 Audio	 Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Disp	 Display / Media
 Menu	 Menu / Home	 Last Memory	 Shift + Back / Return
 Stop	 Stop / Hold	 Angle	 Info / Angle
 Play	 Play / Slow	 Repeat	 Shift + Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 A-B	 Shift + Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
Source	AV / Input / RDS	0/10	0
Power	Power	C	Fav / Marker / PC
DVD	Green / APP / Repeat	Up / Pause	Up
TUN	Red / Netflix / Search	Left/ <<	Left
V1	Blue / Prime Video / Random	Enter/Play	Play / Slow
V2	Shift + Blue / Prime	Right/ >>	>> / Tune+
A1	Yellow / YouTube / Repeat	Down/Stop	Stop / Hold
A2	Shift + Red / Netflix /	Down/Stop	Down
1	1	Enter/Play	OK
2	2	Up / Pause	Pause / Step / Freeze
3	3	< /CH-/ <<<	CH- / Page-
4	4	>/CH+/ >>>	CH+ / Page+
5	5	Left/ <<<	<<< / Tune-
6	6	Right/ >>>	Right
7	7	1 V2	Shift + 1
8	8	2 V2	Shift + 2
9	9	3 V2	Shift + 3





Original	Replacement
 4 V2	 Shift + 4
 5 V2	 Shift + 5
 6 V2	 Shift + 6
 7 V2	 Shift + 7
 8 V2	 Shift + 8
 9 V2	 Shift + 9
 0/10 V2	 Shift + 0
 TV Channel+	 Shift + CH+ /
 TV Channel- V2	 Shift + CH- /
 Up / Pause V2	 Shift + Pause / Step /
 Left/<< V2	 Shift + << /
 Right/>> V2	 Shift + >> /
 Down/Stop V2	 Shift + Stop /
 Down/Stop V2	 Shift + Down
 Up / Pause V2	 Shift + Up
 Left/<< V2	 Shift + Left
 Right/>> V2	 Shift + Right

Original	Replacement





Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		>10		Guide / EPG / -/--
	Power		Power		0/10		0
	DVD		Green / APP / Repeat		C		Fav / Marker / PC
	TUN		Red / Netflix / Search		Up/Pause		Up
	V1		Blue / Prime Video / Random		Left/Left		Left / Tune-
	V2		Shift + Blue / Prime / Prime		Enter/Play		OK
	A1		Yellow / YouTube / Repeat		Right/Right		Right / Tune+
	A2		Shift + Red / Netflix / Netflix		Down/Stop		Stop / Hold
	1		1		Down/Stop		Down
	2		2		Enter/Play		Play / Slow
	3		3		Up/Pause		Pause / Step / Freeze
	4		4		I<<		I<< / Preset-
	5		5		>>I		>>I / Preset+
	6		6		Left/Left		Left
	7		7		Right/Right		Right
	8		8		PGM/Top Menu		TV/Radio /
	9		9		Subtitle/RDM		Subtitle / EQ





Original	Replacement	Original	Replacement
Audio/Disp	Display / Media	Right/>>> A2	+ Shift + >> /
Repeat	+ Shift + Green / APP /	Down/Stop A2	+ Shift + Down
1 A2	+ Shift + 1	Down/Stop A2	+ Shift + Stop /
2 A2	+ Shift + 2	Enter/Play A2	+ Shift + OK
3 A2	+ Shift + 3	Up/Pause A2	+ Shift + Up
4 A2	+ Shift + 4	I<< A2	+ Shift + I<< / Preset-
5 A2	+ Shift + 5	>>I A2	+ Shift + >>I / Preset+
6 A2	+ Shift + 6	Left/<< A2	+ Shift + Left
7 A2	+ Shift + 7	Right/>>> A2	+ Shift + Right
8 A2	+ Shift + 8	PGM/Top Menu	+ Shift + TV/Radio / Program
9 A2	+ Shift + 9	RDM/Subtitle A2	+ Shift + Subtitle / EQ
>10 A2	+ Shift + Guide / EPG / -/-	Audio Disp A2	+ Shift + Display / Media
0/10 A2	+ Shift + 0	Repeat A2	+ Shift + Yellow / YouTube /
C A2	+ Shift + Fav / Marker / PC		
Up/Pause A2	+ Shift + Pause / Step /		
Left/<< A2	+ Shift + << /		
Enter/Play A2	+ Shift + Play /		

Slow

