


 





 





 

 





 









 



 



Original	Replacement
 Sleep	 Sleep / Timer
 [=i]	 Fav / Marker / PC
 Mode	 D.Menu / Top
 [=?]	 Picture / Format
 [<>]/Aspect	 Eject / Surround
 DTV/Radio	 TV/Radio /
 Colour System	 Audio / Lang I/II
 Eco	 Display / Media
 Fun-Link	 Smart / List
 [=♦]	 Zoom / Size
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=o]	 Setup / OPT /
 [...]	 Subtitle / EQ
 OK	 OK
 [=+]	 SHIFT + HOLD Stop /
 [=]	 GOTO Text / Goto
 Play	 SLOW Play / Slow
 Pause	 STEP - FREEZE Pause / Step / Freeze
 Stop	 HOLD Stop / Hold
 I<<	 PRESET- I<< / Preset-
 >>I	 PRESET+ >>I / Preset+
 <<	 TUNE- << / Tune-
 >>	 TUNE+ >> / Tune+
 9	 BLUETOOTH 9 9
 Source	 RDS AV INPUT AV / Input / RDS
 1	 TV 1 1





Original		Replacement		Original		Replacement	
	2		2		Left		Left
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	Power		Power				
	0		0				
	Sound		Sound / Title				
	Guide		Guide / EPG / -/--				
	Back		Back / Return				
	Menu		Menu / Home				
	i		Info / Angle				
	Up		Up				
	Down		Down				
	Right		Right				

