


















 

 



 
 


 
 


 







 



 



 

 

 



 



 



 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Back	 Back
 Source	 AV	 Eco	 Shift + 3D
 Sleep	 Sleep	 Menu	 Menu
 Picture Mode	 Format	 i	 Info
 Sound Mode	 Shift + Dual	 Audio	 Dual
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 Mute	 Mute
 9	 9	 P+	 Ch +
 0	 0	 P-	 Ch -
 [<>]/Aspect	 3D	 Red	 Red
 Guide	 Guide	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Fun-Link	 Media		
 [...]	 Subt		
 [≡◆]	 D. Menu		
 [≡o]	 Smart		
 [≡+]	 Options		
 [≡]	 Text		
 [≡?]	 TV/R		
 [≡i]	 List		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 <<	 <<		

