 



 

 





 



 







 



 



 

 

 

 

 
 
 



 

 

 

 



 
 
 





 

 





Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Eject/Open/Close	 Eject / Surround	 Vol+ Tv	 Vol+
 Power Tv	 Shift + Power	 Title	 Sound / Title
 DVD	 Shift + 2	 0	 0
 VCR	 Shift + 4	 Mute Tv	 Mute / Dimmer
 AV	 AV / Input / RDS	 Vol- Tv	 Vol-
 AV Tv	 Shift + AV / Input / RDS	 O)/Audio	 Audio / Lang I/II
 1	 1	 [...] / Subtitle	 Subtitle / EQ
 2	 2	 Camera/Angle	 Info / Angle
 3	 3	 Rec	 Rec / Rec Mode
 PR+ Tv	 CH+ / Page+	 Rec Mode	 Shift + Rec / Rec Mode
 4	 4	 Timer Rec	 Sleep / Timer
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 PR- Tv	 CH- / Page-	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Pause/Step	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
	Play		Play / Slow
	Stop		Stop / Hold
	List/Disc Menu		Smart / List
	List/Disc Menu		D.Menu / Top
	Up/PR/TRK+		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down/PR/TRK-		Down
	Return		Back / Return
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Zoom		Zoom / Size
	Dubbing		Guide / EPG / -/--
	Lock		Menu / Home
	CHP. ADD		Text / Goto
	Thumbnail		Picture / Format
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Random		Blue / Prime Video / Random
	Tv/VCR		TV/Radio /

