


 
 
 
 

 
 


 




 
 



 













Original	Replacement	Original	Replacement
	Power		Power
	Play		Yellow
	Pause		Index
	<<		Blue
	>>		List
	I<<		Blue
	>>I		Ch +
	Stop		Ch -
	Rec		Input
	Tv/TXT		Vol +
	Cancel		Vol -
	Hold		Mute
	Reveal		Menu
	Size		Exit
	Red		DVB
	Green		Up
	Subpage		Down
			Right
			Left
			Ok



