





 

 

 


















 


 



 

 
 















 


 



 


 






Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Input 1		Shift + 1		[+]/Timer		Info / Angle
	Input 2		Shift + 2		[+]/Timer		Sleep / Timer
	Input 3		Shift + 3		0		0
	Input 4		Shift + 4		HDMI Control		Smart / List
	Input 5		Shift + 5		P+		CH+ / Page+
	PC		Fav / Marker / PC		I-II		Audio / Lang I/II
	[+]/[≡◇]		Setup / OPT /		Vol+		Vol+
	[< >]		Picture / Format		P-		CH- / Page-
	1		1		Mute		Mute / Dimmer
	2		2		Vol-		Vol-
	3		3		Return		Back / Return
	4		4		Up		Up
	5		5		Home Menu		Menu / Home
	6		6		Left		Left
	7		7		Enter		OK
	8		8		Right		Right





Original	Replacement	Original	Replacement
 Down	 Down		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [...]	 Subtitle / EQ		
 [≡?]	 D.Menu / Top		
 [≡i]	 Display / Media		
 [≡]	 Text / Goto		

