

 


 
 

 


 

 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Setup	 Options
 Open / Close	 Eject	 Clear	 Exit
 Input Select	 AV	 Info	 Info
 HDMI	 Media	 Text	 Text
 1	 1	 Variable Replay	 Vol +
 2	 2	 Variable Skip	 Vol -
 3	 3	 Guide	 Guide
 4	 4	 Top Menu	 Menu
 5	 5	 Disc Menu	 D. Menu
 6	 6	 Up	 Up
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Left	 Left
 0	 0	 Enter / OK	 Ok
 Prog +	 Ch +	 Display	 Shift + Info
 Prog -	 Ch -	 Return / Back	 Back
 Timer Prog.	 Shift + AV	 Back	 Pre Ch





Original	Replacement
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue / Search	 Blue
 Search	 +  Shift + TV/R
 Play	 Play
 <<<	 <<<
 >>>	 >>>
 Stop	 Stop
 I<<<	 I<<<
 >>>I	 >>>I
 Pause	 Pause
 VCR	 +  Shift + 1
 VCR	 TV/R
 HDD	 +  Shift + 2
 HDD	 Format
 DVD	 +  Shift + 3

Original	Replacement
 DVD	 3D
 Time Slip	 Sleep
 Dubbing	 +  Shift + Dual
 Rec Mode	 +  Shift + Rec
 Rec	 Rec
 Subtitle	 Subt
 AD	 +  Shift + Subt
 Audio	 Dual
 Sat Link	 Smart

