



 
 
 













 

 






 













 

 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		CH List		Smart / List
	1		1		CH-		CH- / Page-
	2		2		Content		Shift + Menu /
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Info		Info / Angle
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	TTX/MIX		Text / Goto		Right		Right
	0		0		Return		Shift + Back / Return
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red/A		Red / Netflix / Search
	CH+		CH+ / Page+		Green/B		Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow/C	 Yellow / YouTube / Repeat		
	Blue/D	 Blue / Prime Video / Random		
	P.Mode	 Picture / Format		
	SRS	 TV/Radio /		
	Dual I-II	 Audio / Lang I/II		
	E-Manual	 D.Menu / Top		
	P.Size	 Zoom / Size		
	AD/Subt.	 Subtitle / EQ		
	<<	 << / Tune-		
	I<<	 I<< / Preset-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	>>I	 >>I / Preset+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

