











 





 





 

 












Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Back / Return
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 D.Menu / Top
	 Info / Angle
	 Guide / EPG / -/-
	 Vol+

Original	Replacement
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Fav / Marker / PC
	 0
	 Fav / Marker / PC
	 Picture / Format





Original		Replacement		Original		Replacement	
	Lang		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Sleep		Sleep / Timer				
	(O)		Display / Media				
	O/World		Smart / List				
	[≡x]		TV/Radio /				
	[≡]		Text / Goto				

