











 





 





 

 
 













 






Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Back / Return
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 D.Menu / Top
	 Info / Angle
	 Guide / EPG / -/--
	 Vol+

Original	Replacement
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Fav / Marker / PC
	 0
	 Fav / Marker / PC
	 Picture / Format





Original	Replacement	Original	Replacement
 Lang	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Sleep	 Sleep / Timer		
 (O)	 Display / Media		
 O/World	 Smart / List		
 [≡x]	 TV/Radio /		
 [≡]	 Text / Goto		

