







 



 



 



 







 



 







 



 



 



 














 

 







 




 









Original	Replacement	Original	Replacement
 Internet	 Smart / List	 Sleep	 Sleep / Timer
 Power	 Power	 1	 1
 Rec	 Rec / Rec Mode	 2	 2
 Play	 Play / Slow	 3	 3
 Pause	 Pause / Step / Freeze	 4	 4
 Stop	 Stop / Hold	 5	 5
 I<<	 I<< / Preset-	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 >>I	 >>I / Preset+	 9	 9
 Screen	 Picture / Format	 Source	 AV / Input / RDS
 Lang	 Audio / Lang I/II	 0	 0
 Subtitle	 Subtitle / EQ	 Swap	 D.Menu / Top
 Presets	 Setup / OPT /	 Menu	 Menu / Home
 EPG	 Guide / EPG / --	 Mute	 Mute / Dimmer
 Text	 Text / Goto	 P+	 CH+ / Page+
 FAV	 Fav / Marker / PC	 Up	 Up





Original		Replacement		Original		Replacement	
	V+		Vol+				
	Left		Left				
	Ok		OK				
	Right		Right				
	P-		CH- / Page-				
	Down		Down				
	V-		Vol-				
	Back		Back / Return				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Multimedia		Display / Media				
	My Button1		Eject / Surround				
	My Button2		TV/Radio /				
	Info		Info / Angle				

