




Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/INPUT	 AV / Input / RDS
 AV/INPUT Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Original	Replacement
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Blue / Prime Video / Random
 0	 0
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze





Original	Replacement
	Play / Slow
	Stop / Hold
	D.Menu / Top
	Up
	Menu / Home
	Left
	OK
	Right
	Display / Media
	Down
	Back / Return
	Text / Goto
	Fav / Marker / PC
	Red / Netflix / Search
	Setup / OPT /
	Smart / List
	Zoom / Size

Original	Replacement
	Sound / Title
	Guide / EPG / -/-
	Info / Angle
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Picture / Format
	TV/Radio /

