






 
 








Original		Replacement		Original		Replacement	
	Power		Power		i		INFO
	Mute		MUTE		EPG		MEDIA
	1		1		Exit		EXIT
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Left		LEFT
	6		6		Ok		OK
	7		7		TV / Radio		TV/R
	8		8		Zoom		WIDE
	9		9		Prog-		CH -
	0		0		Prog+		CH +
	Pause		Pause		F1		OPT+
	Fav		VOD		P/N		BACK
	Sat		-./- / EPG		Text		TEXT
	Recall		P/C / FAV		Subtitles		Subt.
	Menu		MENU		Red / Audio		Red (A)





Original	Replacement	Original	Replacement
 Audio	 Audio		
 Green / Mosaic	 Green (B)		
 Yellow / Clock	 Yellow (C)		
 Blue / Text	 Blue (D)		
 TV/SAT	 SRC		
 Vol -	 VOL -		
 Vol +	 VOL +		
 Page +	 Last		
 Page -	 First		
 Page -	 Rewind		
 Page +	 Fast Forward		
 UHF	 V-FOR		
 PIP / Help	 Shift + V-FOR		

