






 

 


 











 





 






 


 








 



 



 





 

 

 




	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Sound
	8		8		Pic
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		Tv/Radio
	ChList		List		Text
					Exit
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Shift + Dual
					Shift + Format
					Ch +
					Ch -
					Sleep
					Format
					Eject
					TV/R
					Text





Original	Replacement	Original	Replacement
 Epp	 Guide	 I<<	 I<<
 Fav	 Pre Ch	 >>I	 >>I
 Info	 Info	 Play	 Play
 Red	 Red	 Pause	 Pause
 Green	 Green	 Stop	 Stop
 Yellow	 Yellow	 Rec/Rep	 Rec
 Blue	 Blue		
 Reveal	 Media		
 Hold	 D. Menu		
 Index	 Shift + Info		
 Subpage	 Shift + AV		
 List	 Smart		
 Mix	 Options		
 Subtitle	 Subt		
 Size	 3D		
 <<	 <<		
 >>	 >>		

