



 

 








 

 
 
 


 

 

 

 









 




 





Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	Stop		Yellow / YouTube / Repeat
	Pause		Blue / Prime Video / Random
	Rec		Info / Angle
	<<		Setup / OPT /
	Play		Up
	>>		Left
	Zoom / Size		OK
	D.Menu / Top		Right
	Picture / Format		Back / Return
	Guide / EPG / -/--		Down
	Shift + Red / Netflix /		Display / Media
	AV / Input / RDS		Vol+
	Smart / List		Shift + Smart / List
	Menu / Home		CH+ / Page+
	Exit / Cancel / Clear		Vol-
	Red / Netflix / Search		Mute / Dimmer





	Original	Replacement		Original	Replacement
	CH-	 CH PAGE			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Subtitle	 SUBTITLE			
	0	 0			
	Text	 TEXT			

	Original	Replacement		Original	Replacement

