



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
*(Left)	Shift + Left
0	0
*(Right)	Shift + Right
[ ]/Picture	Picture / Format
/j/Sound	Sound / Title
I-II	Audio / Lang I/II

Original	Replacement
Menu	Menu / Home
Up/PR+	Up
PR+	CH+ / Page+
List	Smart / List
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Sleep	Sleep / Timer
Down/PR-	Down
PR-	CH- / Page-
P<P	Back / Return
Tv/AV	AV / Input / RDS
Tv/PC	TV/Radio /
[ <> ]/ARC	Shift + Picture / Format
Red	Red / Netflix / Search



